

Preset Number	Display Name	Additional Info
PRESET 01 à	FULLRANGE	Factory preset. Flat response.
PRESET 02 à	X-OVER 40Hz	40Hz HighPass (Linkwitz Riley 24 dB/Oct)
PRESET 03 à	X-OVER 50Hz	50Hz HighPass (Linkwitz Riley 24 dB/Oct)
PRESET 04 à	X-OVER 60Hz	60Hz HighPass (Linkwitz Riley 24 dB/Oct)
PRESET 05 à	X-OVER 70Hz	70Hz HighPass (Linkwitz Riley 24 dB/Oct)
PRESET 06 à	X-OVER 80Hz	80Hz HighPass (Linkwitz Riley 24 dB/Oct)
PRESET 07 à	X-OVER 90Hz	90Hz HighPass (Linkwitz Riley 24 dB/Oct)
PRESET 08 à	X-OVER 100Hz	100Hz HighPass (Linkwitz Riley 24 dB/Oct)
PRESET 09 à	FULLRANGE -3dB	Factory preset. Flat response. -3dB gain
PRESET 10 à	FULLRANGE -6dB	Factory preset. Flat response. -6dB gain
PRESET 11 à	FULLRANGE	Factory preset. Flat response.
PRESET 12 à	FULLRANGE	Factory preset. Flat response.
PRESET 13 à	FULLRANGE	Factory preset. Flat response.