

Preset Number	Display Name	Additional Info
PRESET 01 à	FULL RANGE	
PRESET 02 à	X80Hz	80Hz HighPass (Linkwitz Riley 24 dB/Oct)
PRESET 03 à	X90Hz	90Hz HighPass (Linkwitz Riley 24 dB/Oct)
PRESET 04 à	X100Hz	100Hz HighPass (Linkwitz Riley 24 dB/Oct)
PRESET 05 à	FULLRANGE-3dB	- 3dB Input Sensitivity Gain
PRESET 06 à	X80Hz -3dB	<ul style="list-style-type: none">• 80Hz HighPass (Linkwitz Riley 24 dB/Oct)• -3dB Input Sensitivity Gain
PRESET 07 à	X90Hz -3dB	<ul style="list-style-type: none">• 90Hz HighPass (Linkwitz Riley 24 dB/Oct)• -3dB Input Sensitivity Gain
PRESET 08 à	X100Hz -3dB	<ul style="list-style-type: none">• 100Hz HighPass (Linkwitz Riley 24 dB/Oct)• -3dB Input Sensitivity Gain
PRESET 09 à	FULLRANGE-6dB	-6dB Input Sensitivity Gain
PRESET 10 à	X80Hz -6dB	<ul style="list-style-type: none">• 80Hz HighPass (Linkwitz Riley 24 dB/Oct)• -6dB Input Sensitivity Gain
PRESET 11 à	X90Hz -6dB	<ul style="list-style-type: none">• 90Hz HighPass (Linkwitz Riley 24 dB/Oct)• -6dB Input Sensitivity Gain
PRESET 12 à	X100Hz -6dB	<ul style="list-style-type: none">• 100Hz HighPass (Linkwitz Riley 24 dB/Oct)• -6dB Input Sensitivity Gain
PRESET 13 à	FULL RANGE	